




# ORGAPACK OR-H 47 – Brukerveiledning

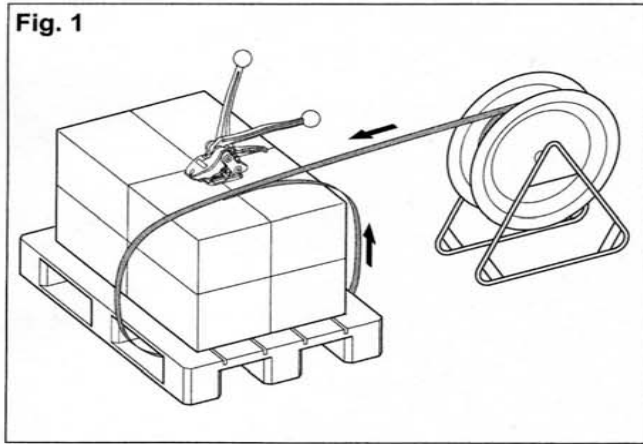


**Fig. 1**  
- Trekk båndet over pakken, og så under og opp, slik at båndene ligger over hverandre på toppen av pakken, (se piler).

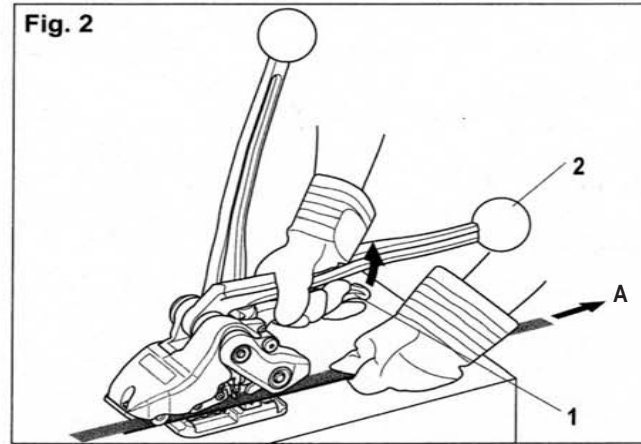


**Fig. 2**  
- Hold verktøyet i høyrehånd og løft håndtaket (1) mot låsearmen (2).  
- Plasser verktøyet mot båndet inntil stoppkanten.  
- Slipp håndtaket.  
- Stram båndet manuelt i retning pilen (A).

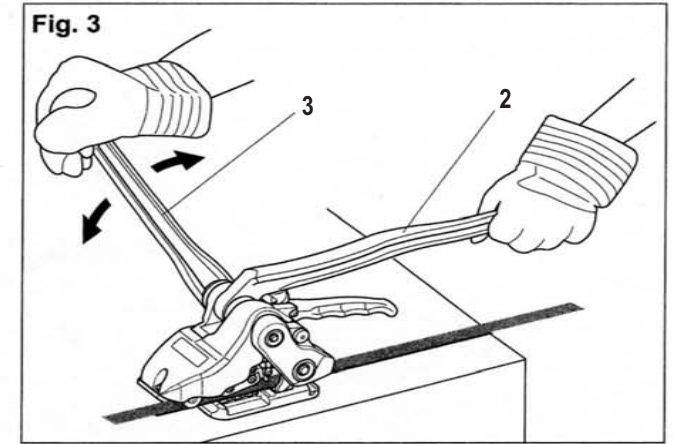


**Fig. 3**  
- Hold låsearmen (2) i venstrehånd og med høyrehånd dra strammearmen (3) frem og tilbake inntil båndet er tilstrekkelig stramt.

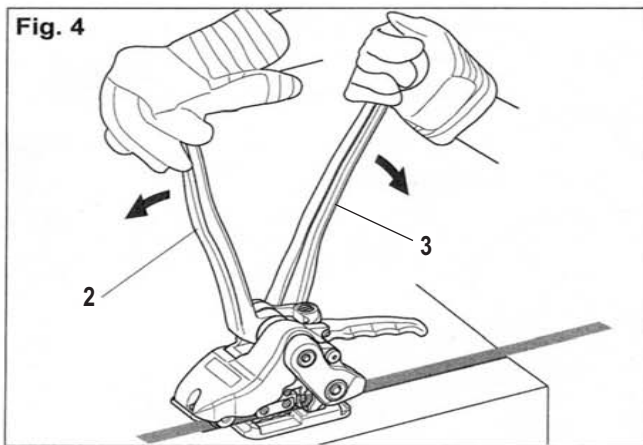

**Fig. 4**  
- Når båndet er strammet, dra strammearmen (3) tilbake til stoppunkt og press låsearmen (2) helt frem til båndet låses og kuttes.  
- Om båndet er kuttet feil (se kapittel 6.2).

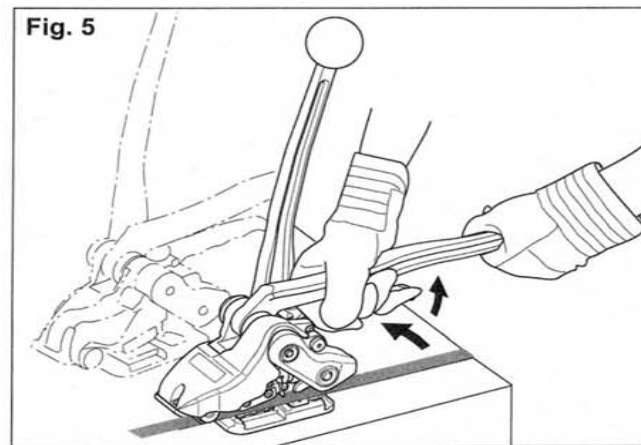


**Fig. 5**  
- Tilbakestill låsearmen til startposisjon.  
- Løft håndtaket mot låsearmen.  
- Frigjør verktøyet bakover og til høyre fra båndet.

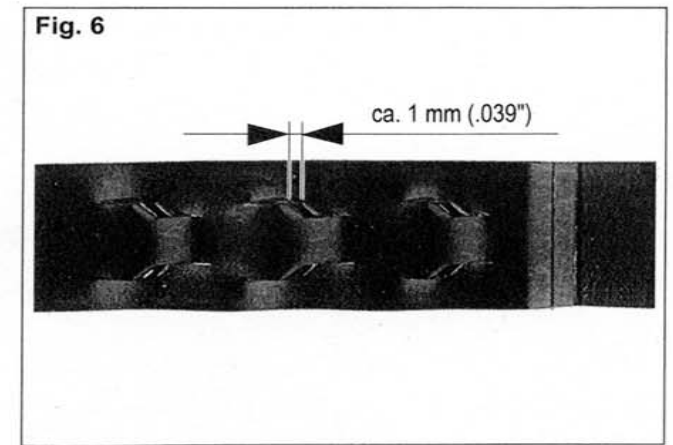


**Fig. 6**  
- For å oppnå maks låseeffekt, må hakkene på båndet være ordentlig tilskjært og føyd sammen. Dette må sjekkes regelmessig. Om skjæringspunktene er feil - erstattes stansenverktøyet og strammepluggen (se kapittel 6.3).


# ORGAPACK OR-H 47 – Operating instructions

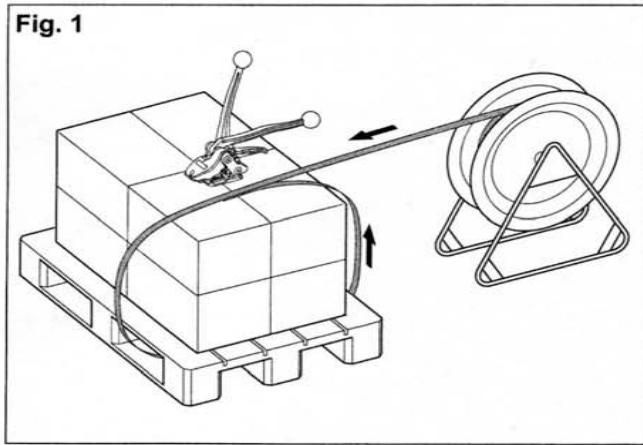


**Fig. 1**  
- Pull strap over the packed goods, then under and up, so that the straps overlap each other on top of the package, (see arrows).

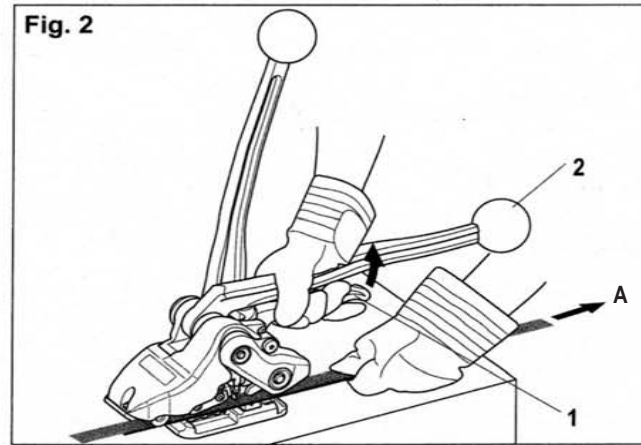


**Fig. 2**  
- Hold tool in right hand and raise rocker lever (1) against sealing lever (2).  
- Place tool against the strap until it contacts the stop.  
- Release rocker lever.  
- Strap can now be manually pretensioned toward arrow (A).

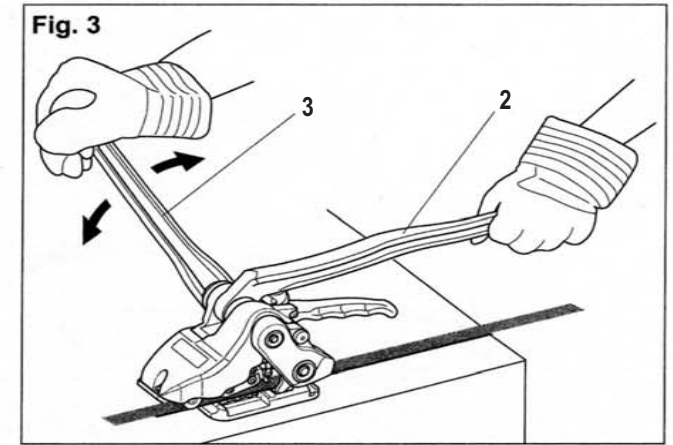


**Fig. 3**  
- Hold sealing lever (2) in left hand and with the right hand move the tensioning lever (3) backwards and forwards until the required strap tension is obtained.

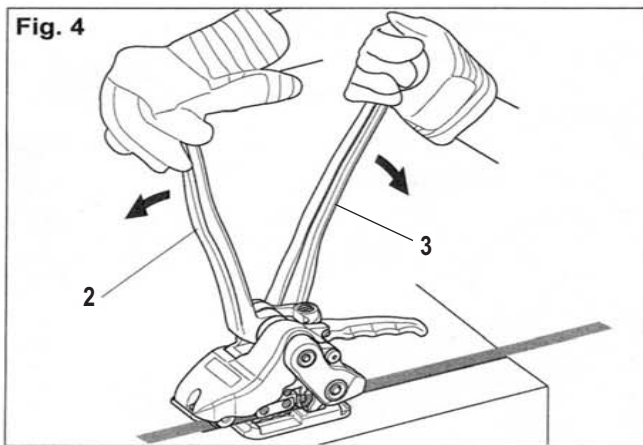

**Fig. 4**  
- When the strap tension is reached, pull the tensioning lever (3) back to the stop and push the sealing lever (2) completely forward until the strap is sealed and cut.  
- If the strap cut is incorrect (see chapter 6.2).

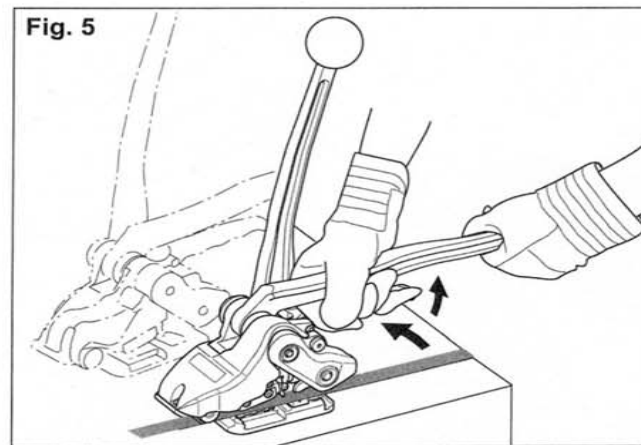

**Fig. 5**  
- Return sealing lever to initial position.  
- Raise the rocker lever against the sealing lever.  
- Swivel the tool away from the strapping backwards and to the right.

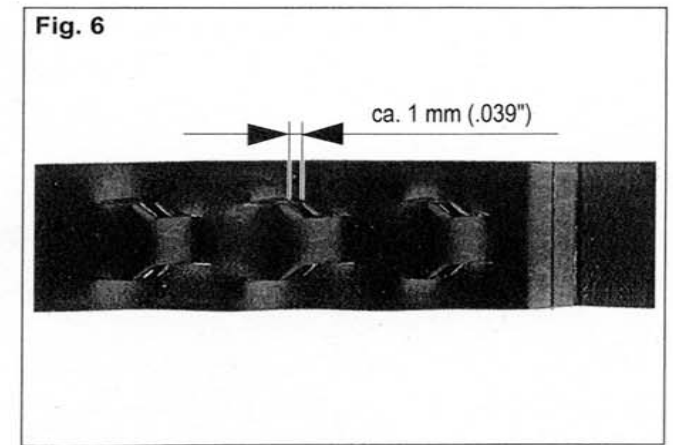

**Fig. 6**  
- To obtain the maximum seal efficiency, the notches must be cut and interlocked properly into the straps. Check this regularly. If these are not correctly cut, replace die and tension plug (see chapter 6.3).